

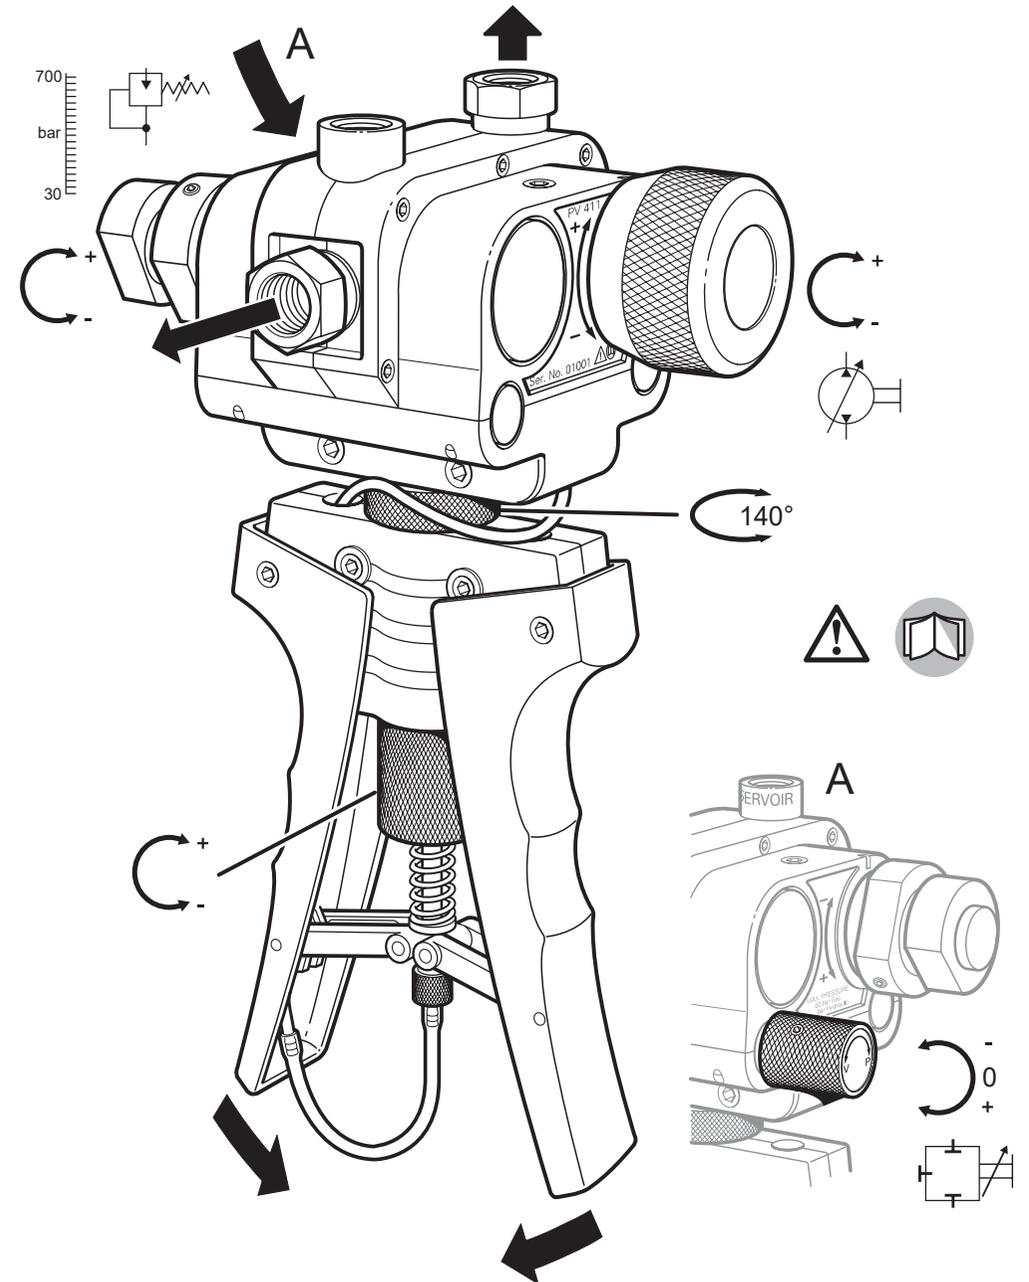
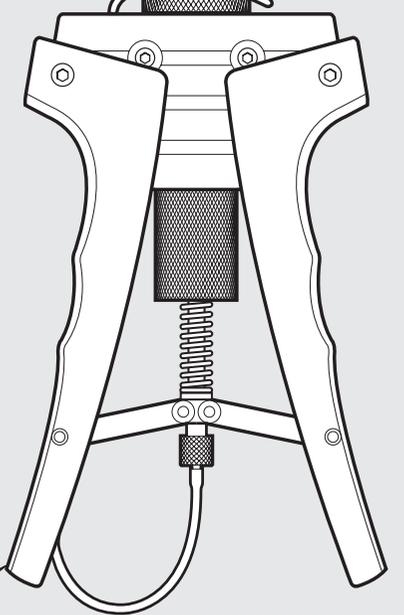
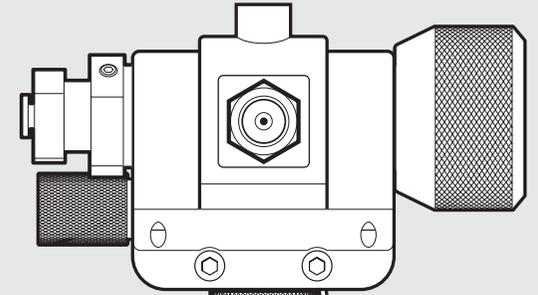
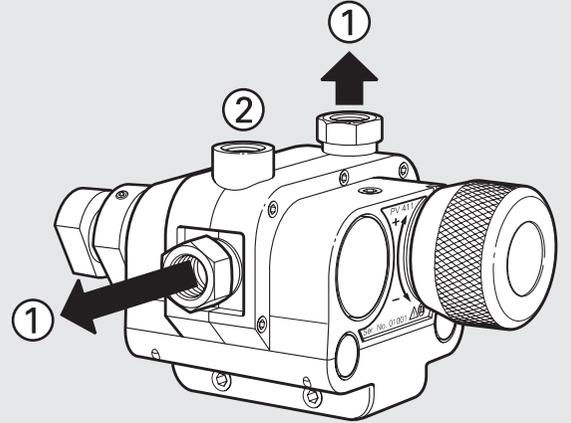
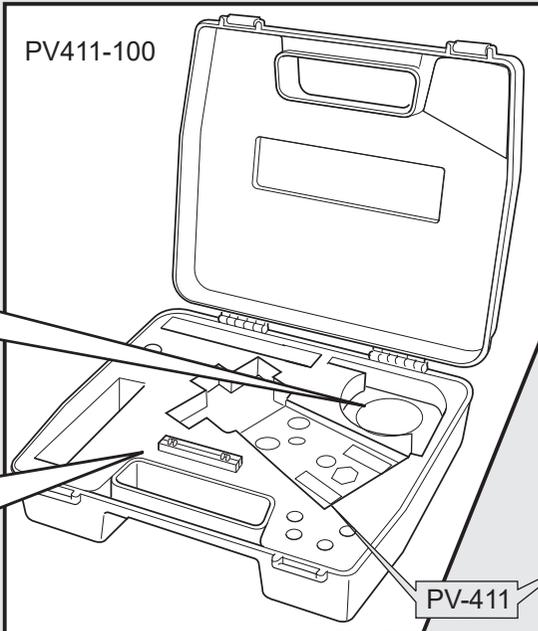
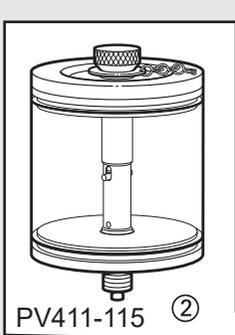
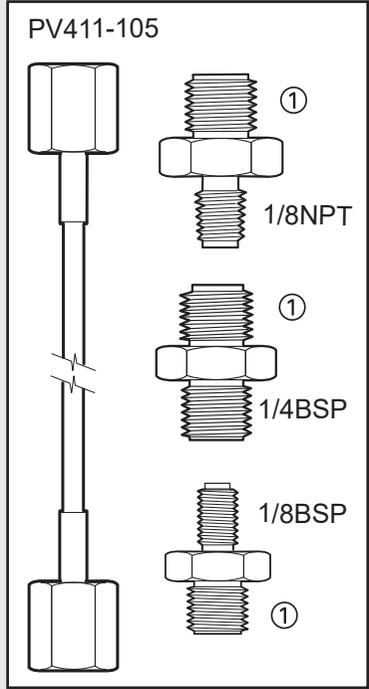
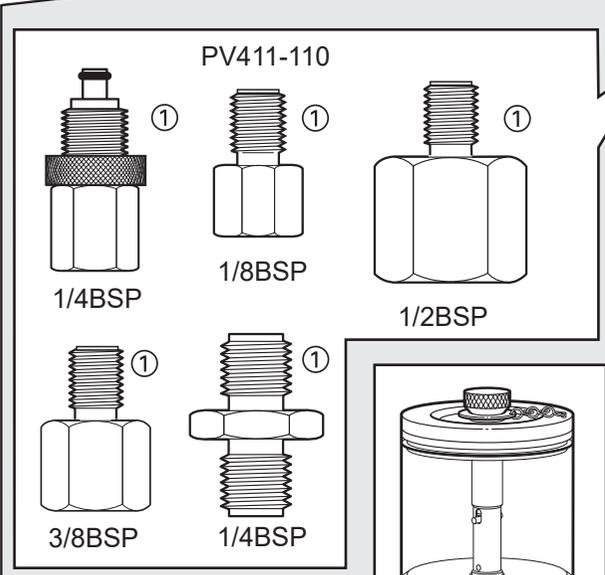
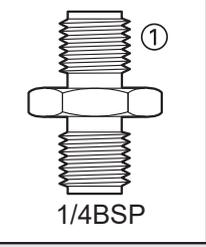
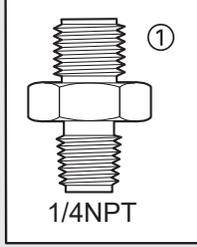
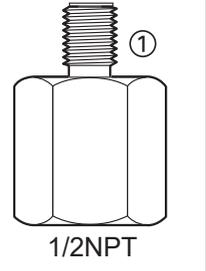
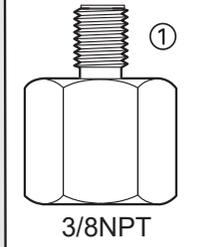
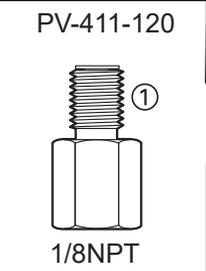
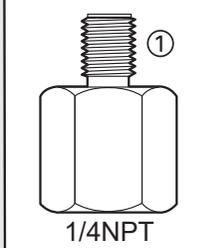


Druck

SENSYCAL
CONFIANÇA EM MEDIÇÕES

**PV 411A Pneumatic/Hydraulic Hand-Pump
Operating Guide**

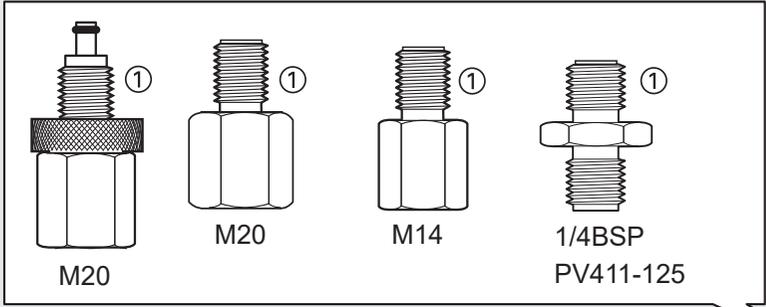

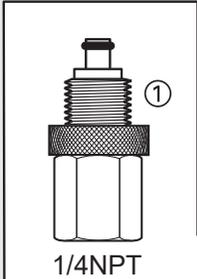

PV-411-P =
PV-411 +
PV-411-100 +
PV-411-105 +
PV-411-110 +
PV-411-130

PV-411-HP =
PV-411-P +
PV-411-115

www.druck.com

